


NÖRSKTRACK™

INSTALLATION

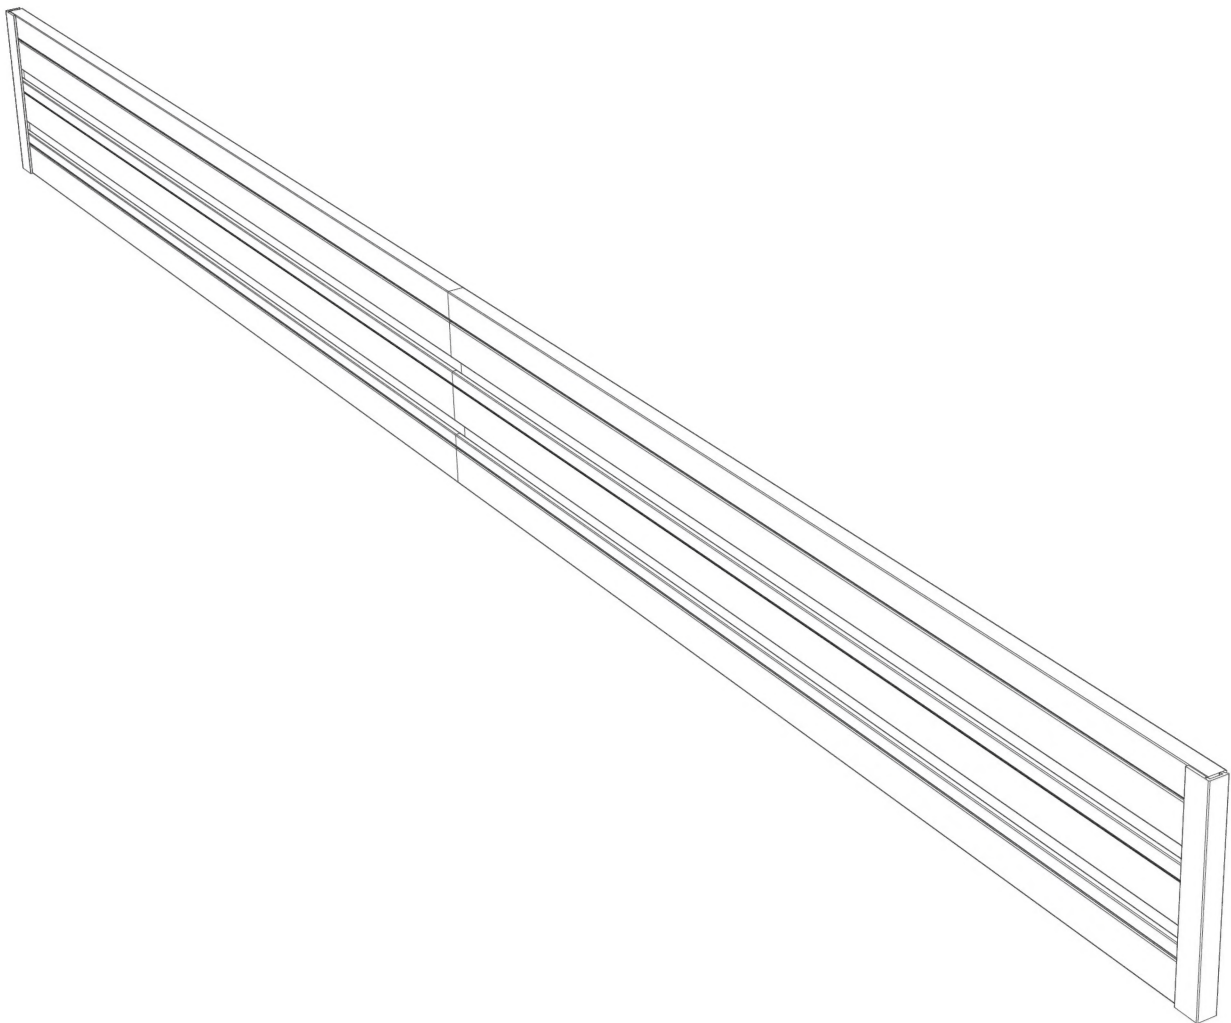

2
pcs.

5
sq.ft.

NORSK TRACK™ SYSTEM ASSEMBLY INSTRUCTIONS / 5 SQ.FT.

Tools Required:


- Drill
- Stud finder
- Pencil
- Step stool / ladder
- Level
- Tape measure
- Rubber mallet

For installation instruction videos visit us at:
www.norsk-stor.com/slatwall-videos.html


Bottom Rail




Top Rail

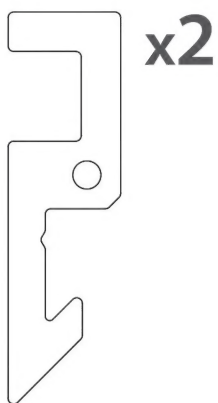


Side Trim

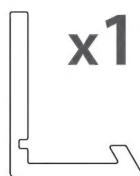


NorskTrack Panel

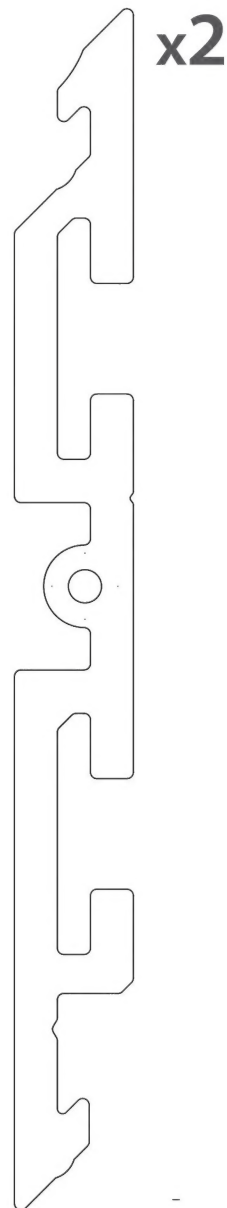

Dowel

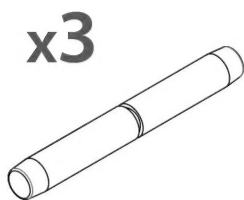


Screws

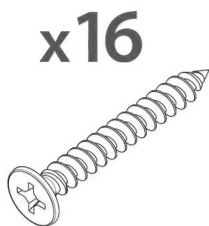


E-Clip




Low Clip

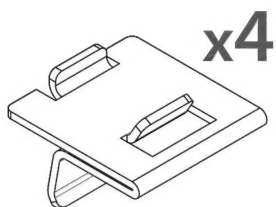


High Clip

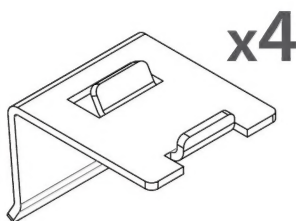


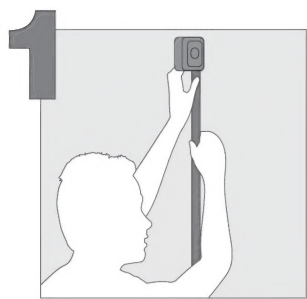



Mark the desired height of the NorskTrack™ on your wall.

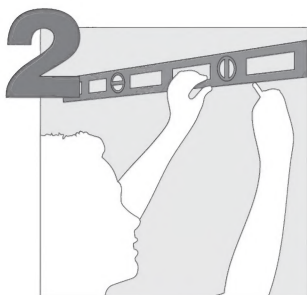



Draw a level line at this point (start at stud) to the end of where you want the Track to stop.

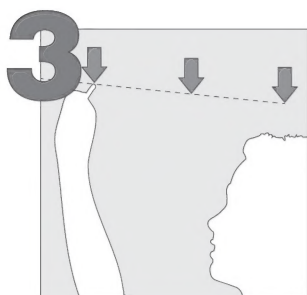



Mark with pencil your stud locations on this level line.

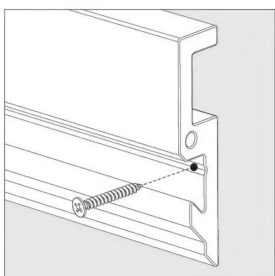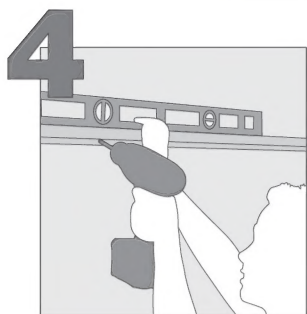

Place Top Rail just above line (so you can see stud marks) make sure it is level and install screws starting them into indented slots at each stud location.

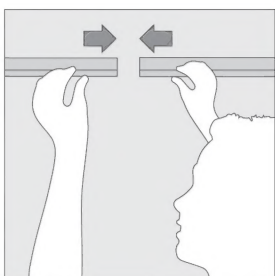
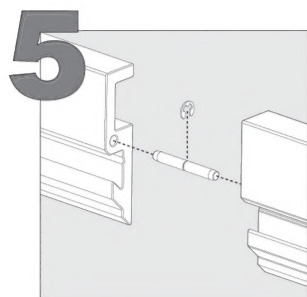


Continue adding more Top Rail across desired line until Top Rail of Track is complete. Make sure you use a Dowel and Retaining Ring in middle of each Dowel to connect each Top Rail together (If possible try to use $\frac{1}{2}$ of one stud for each piece of Top Rail). Lightly tap end of Top Rail with mallet to seat Top Rail onto the Dowel.

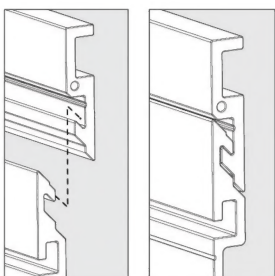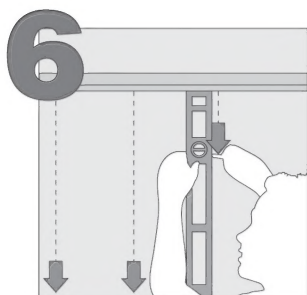


Now that your Top Rail is complete and level use a level and draw a line straight down each stud mark to just below bottom of last panel that you will use for NorskTrack™. Now take each NorskTrack™ Panel and slide into Top Rail, which will cover screws from previous steps.

7

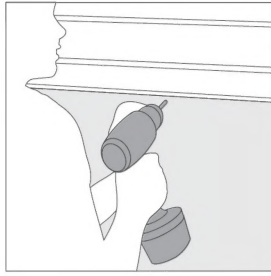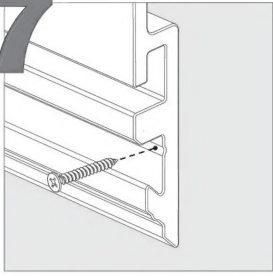




Install screws in bottom Panel again where indent is located and where you have marked the studs.

8

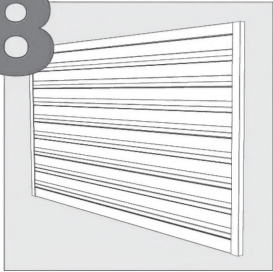




If you are only creating a single column Norsk-Track™ skip to Step 10.

9

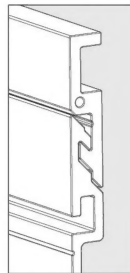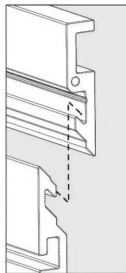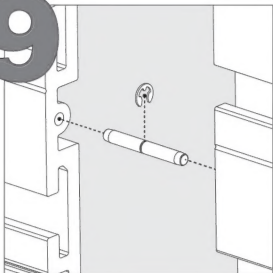



If you are creating a Norsk Track™ with multiple columns, add Dowels in each hole with Retaining Rings in middle of each prior to connecting next Panel and repeat Step 6 until all Panels are installed.

10

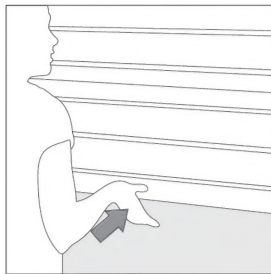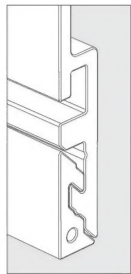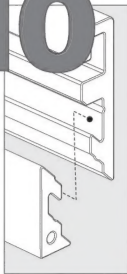


Install Bottom Rail pieces by simply placing them in bottom Panel (where screws are installed) and firmly pushing and locking them in.

11

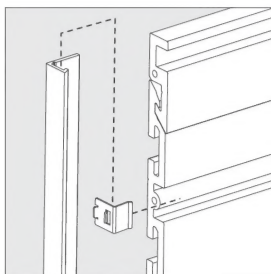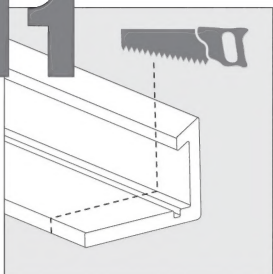

LAST Step: Use long piece of Side Trim and cut to size (hack saw or other appropriate saw for cutting PVC) and install Side Trim Clips (1 Clip per Track) by sliding Clip(s) onto rail located in Side Trim and snap into side of Track.

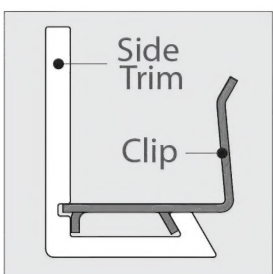


For installation instruction videos visit us at:
www.norsk-stor.com/slatwall-videos.html




NOTICE:

Please read before installing or risk damaging NorskTrack™

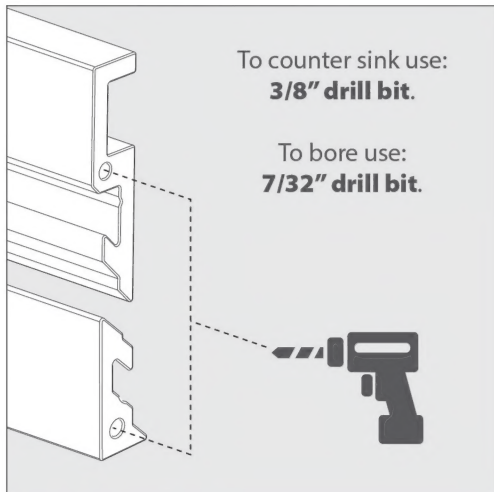


If there is a gap between two Top Rails end to end or Bottom Rails end to end because of the Dowel/E-Clip you can counter sink the hole 1/8" with a **3/8" drill bit.**

Also if you are having trouble getting the Dowels in any of the Dowel holes you can bore out any of the Dowel holes with a **7/32" drill bit.**

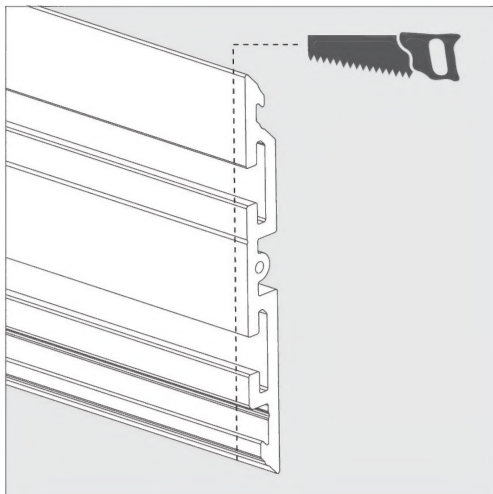

If Side Rails don't fit because the Panel, Top Rail, or Bottom Rail are too long use a saw to cut off extra length.

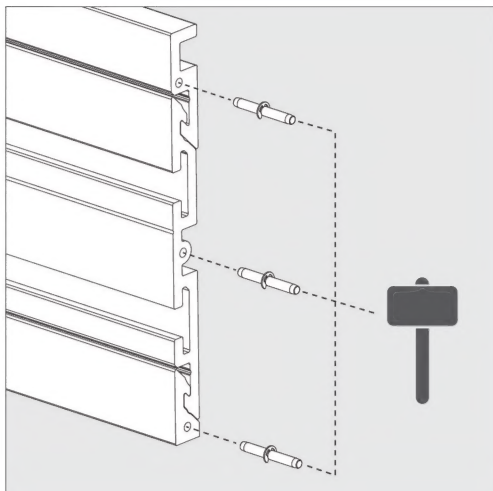

If your having trouble getting Dowels into Dowel holes by hand you can tap Dowels lightly with a hammer or mallet.

For installation instruction videos visit us at:
www.norsk-stor.com/slatwall-videos.html

Call Customer service at: **1(888) 443-9058**